 


in.k175™

wired remote control

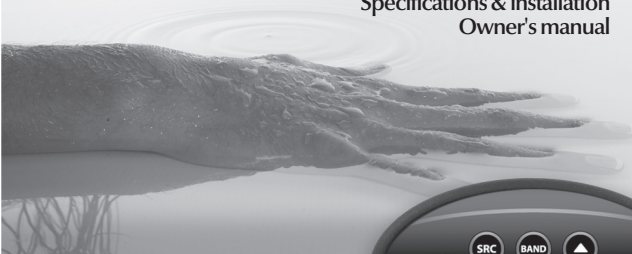

Specifications & installation
Owner's manual



Giving full control
to wet fingers!

Aeware
by gecko **3**®



in.K175™ AEWARE AUDIO/VIDEO KEYPAD

Warnings:

FAILURE TO COMPLY WITH THE FOLLOWING WARNINGS MAY SIGNIFICANTLY SHORTEN THE PRODUCT'S LIFE TIME, AND LEAD TO FAILURES AS WELL AS HAZARDOUS CONDITIONS*. COMMON SENSE MUST ALWAYS PREVAIL WHEN EVALUATING THE INSTALLATION AND/OR USE OF ANY ELECTRONIC CONTROL IN A FINAL APPLICATION.

- The maximum ambient conditions this PRODUCT is subjected to (temperature, humidity, etc.) are not to be exceeded.
 - This PRODUCT must be installed by a qualified personnel.
 - Only qualified personnel are to service this PRODUCT. There are no user serviceable parts inside.
 - This PRODUCT is only compatible with Aeware's® in.tune™ products.
 - This PRODUCT should be installed on a clean flat surface.
 - The gasket on the back of the unit will prevent water infiltration inside, behind the mounted surface. If the gasket is damaged, the user must seal the back of the unit with silicone to avoid any leakage behind the mounted surface.
- * HAZARDOUS CONDITION: A condition that is potentially damaging and/or dangerous to its operator or surroundings. This includes, but is not limited to: fire, flooding or other water damage, dielectric breakdowns (presence of high voltage), etc.

Compatibility:

Radio models supported by in.k175™ are:

- Aeware® in.tune™ / in.tune.110™ receiver model.
- Aeware® in.pix™ audio/video model.

Environmentals:

- Humidity: Up to 95 %
condensing
- Operating temp.: -20 to 50°C
- Storage temp.: -30 to 70°C

Mechanical Specs:

- 3.58 (Length) by 2.15" (Width) by 0.20" (Height).
- Soft gasket

Standards:

- IP rating IPX5
- UV resistant
- UL 1563
- CSA C22.2 No.218.1

User Instructions:

**Source:**

Pressing SRC will allow you to select a source between the following (in order): Tuner, CD/DVD, CD changer, Aux.

**Band:**

Press Band to select between FM1, FM2, FM3, AM1, AM2 and WB (Weather Band available with in.tune only)

**Track Down:**

Radio mode

Press Track Down to go to the previous preset station.

Weather band

Press Track Down to go to the previous memorized station (in.tune only).

CD mode

Press Track Down to change music track.

MP3 mode

Press Track Down to select file Down. If source is CD or CD changer, press on this key to go back to the previous song.

DVD mode

Press Track Down to go to next lower chapter.

Mute:

A 2 seconds press on this key mute the audio output. Press again during 2 seconds to return to previous volume level.

User Instructions:



Track Up:

- | | |
|--------------|--|
| Radio mode | Press Track Up to go to the next preset station. |
| Weather band | Press Track Up to go to the next memorized station (in.tune only). |
| CD mode | Press Track Up to change music track. |
| MP3 mode | Press Track Up to select file up. If source is CD or CD changer, press on this key to go forward to the next song. |
| DVD mode | Press Track Up to go to next higher chapter. |



Volume Up:

 
Press on this key to increase volume.



Volume Down:

Press on this key to decrease volume.

Wiring Diagram:

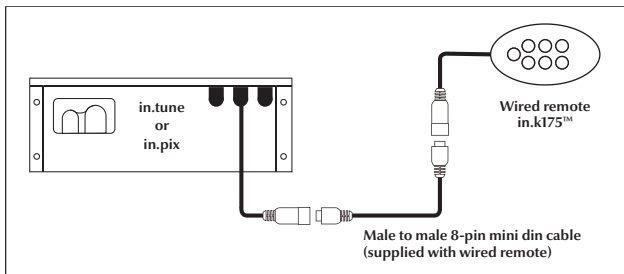


Installation:

- To install the in.k175™, use the drilling template to cut the surface, peel off the backing paper of the adhesive and stick the in.k175™ on the surface.
(see illustration)



Drilling template:

 - scale 1 : 1

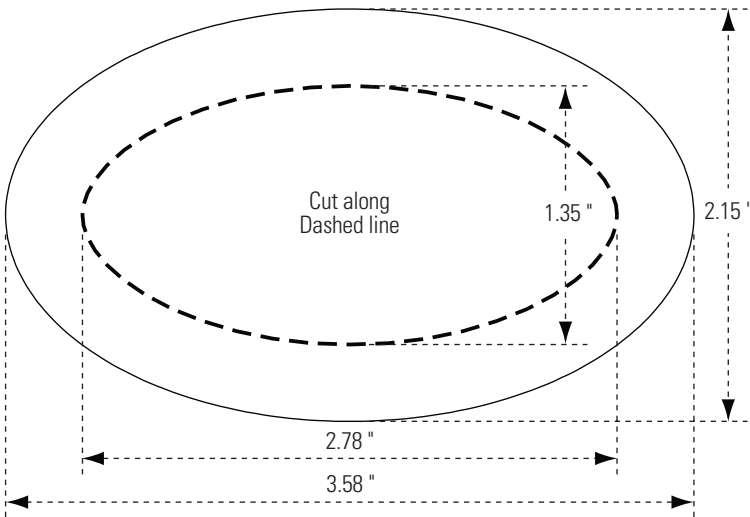

User Instructions:




Power:

Press Power to turn system on or off.



Fader:

A 2 seconds press on  will allow you to change the fader adjustments:
FAD-FRONT: Front speaker only.
FAD-REAR: Rear speaker only.
FAD-ALL: Front and rear speakers.

Aeware
by *gecko* 

www.geckoalliance.com



1.800.78.GECKO